

TIPS AND TRICKS

HOW DO I GENERATE A NEW PIN?

e-BRIDGE® Global Print PIN Login

Most end users authenticate at the MFP panel using a Personal Identification Number (PIN). This six-digit number is also used to register proximity badges. All users that are created in the e-BRIDGE® Global Print cloud, either by an admin or automatically using domain matching, are given a PIN.

Generating a New PIN

All users can view their current PIN in the “My Settings” tab of the e-BRIDGE® Global Print cloud. Clicking the “Refresh” button will delete the old PIN and generate a new, random one for the user. Toshiba ensures that each PIN is unique within the same company account.

